



Electric Heat Cutter Instructions / Specifications

Part # 14-600-01

Box Contents		
(1) Electric Rope Cutter	(1) 2 5/16" Cutter Blade	(2) Post Collars

Direction of Assembly

1. **Unpack all components** from the box and **verify that all parts are included.**
2. **Place the post collars** onto the prongs on top of the **rope cutter.**
 - **Note:** Do **not tighten** the post collar screws at this stage.
3. **Position the blade** onto the prongs on top of the rope cutter.
 - **Align the indentations** on the inside of the blade's legs with the prongs.
 - Ensure the **blade's legs are positioned on the outside** of the prongs.
 - **Tip:** The blade's legs may need to be **bent slightly** to fit properly — this is **normal** and will **not affect performance.**
4. **Slide the post collars upward** until they are positioned over the area where the **blade and prongs overlap.**
5. **Tighten the post collar screws securely** using a **flathead screwdriver** until the blade is **firmly in place.**

Direction of Use

Plug the **Electric Rope Cutter** into a **120-volt outlet** and allow **1–2 minutes** for the blade to heat up. **Hold the rope firmly** with both hands, keeping at least **1½ inches** from the blade. **Touch the rope lightly** to the heated blade and move it in a **smooth sawing motion** to cut.

⚠ CAUTION: The **blade and rope ends** become **very hot—handle with care.** Wait until the **blade stops smoking** before turning off the cutter. If **residue builds up**, let the blade **cool**, then **clean** with a **wire brush** or **fine sandpaper.**

Do **not leave the cutter on** when not in use. When used properly, it should provide **years of reliable performance.**

Mounting

The **Electric Rope Cutter** includes **four pre-drilled 3/16" mounting holes** in the base flange. The unit can be mounted **horizontally on a table** or **vertically on a wall.**

Proper mounting is essential to prevent the cutter from **shifting or falling**, which could cause **injury or a fire hazard.**

⚠ CAUTION: TO AVOID SKIN BURNS, DO NOT TOUCH THE BLADE DURING USE. DO NOT USE THE ELECTRIC ROPE CUTTER TO CUT NATURAL FIBERS.



Revision 2025-10